

REFLEXION® Adjustable Base

ARC and Boost 2.0

** (with orange sticker at the back of the remote)



Child Lock

A) DEACTIVATE child lock

1. **Press and hold** the HEAD DOWN and FOOT DOWN buttons together for 3 seconds.



2. **Press and hold** the HEAD UP and FOOT UP buttons together for 3 to 6 seconds, until the remote LED and/ backlight will **flash twice (2)**



3. When the backlight goes away, the remote is no longer in Child Lock

REFLEXION® Adjustable Base

ARC and Boost 2.0

** (with orange sticker at the back of the remote)



Child Lock

B) ACTIVATE child lock

1. **Press and hold** the HEAD UP and FOOT UP buttons together for 3 seconds.




2. The remote LED and/ backlight will **flash twice (2)**.
When the backlight goes away, the remote is now in Child Lock.

REFLEXION® Adjustable Base

ARC

Synchronization

1. **Unplug** the Power Cord from your power outlet.
2. **Wait** 1 minute, then **plug it back** in to your power outlet.
3. **Perform Step 2** within 10 seconds, while the control box light is flashing.

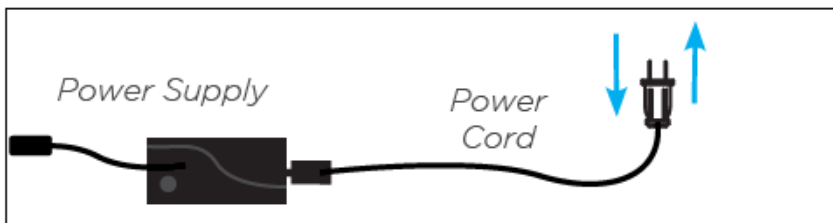

4. **Press and hold** the **PAIR** button on the back of the remote. The PAIR button will illuminate and start to flash. When the **PAIR button stops flashing**, the LED light on the control box will stop flashing.
5. **Release** the **PAIR** button, the base is synchronized.
NOTE: Remove the back cover of the remote to find the pair button.



REFLEXION® Adjustable Base

BOOST 2.0

Synchronization

1. **Double click** on the battery backup button.
A light on the box will illuminate.



Battery
backup box



2. **Press and hold** down the **Head Up** and **Star** buttons simultaneously. (7 sec)
The LED light on the remote will start flashing. The base is synchronized when the light stops flashing.

